READ AND SAVE THESE INSTRUCTIONS

"Unplug or disconnect the appliance from the power supply source before servicing"

WARNING


TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK, OR INJURY TO PERSONS, OBSERVE THE FOLLOWING:

- a) Use this unit only in the manner intended by the manufacturer. If you have questions, contact the manufacturer.
- b) Before servicing or cleaning unit, switch power off at service panel and lock the service disconnecting means to prevent power from being switched on accidentally. When the service disconnecting means cannot be locked, securely fasten a prominent warning device such as a tag, to the service panel.
- c) Installation work and electrical wiring must be done by qualified person(s) in accordance with all applicable codes and standards, including fire-rated construction.
- d) When cutting or drilling into wall or ceiling, do not damage electrical wiring and other hidden utilities.
- e) Ducted fans must always be vented to the outdoors.

CAUTION - "For General Ventilating Use Only. Do Not Use To Exhaust Hazardous Or Explosive Materials And Vapors"

"A" SERIES DIRECT DRIVE WALL EXHAUST FAN INSTALLATION INSTRUCTIONS

NOTE: WHEN OSHA APPROVED GUARD IS NOT USED, FAN MUST BE INSTALLED 8' ABOVE THE GROUND LEVEL

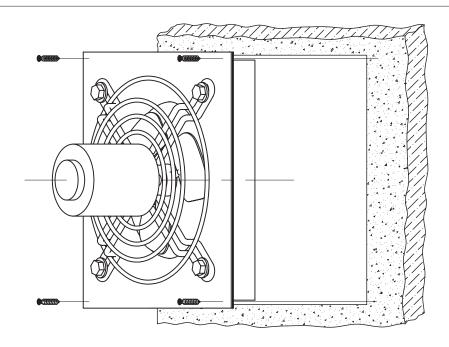

MODEL NUMBER A 8 -2

A 10-2

A 12-2


A 14-2

A 16-2

A 18-2 A 20-2

ALL "A" FANS INCLUDING A 24V

ALL "A" FANS EXCEPT A 24V

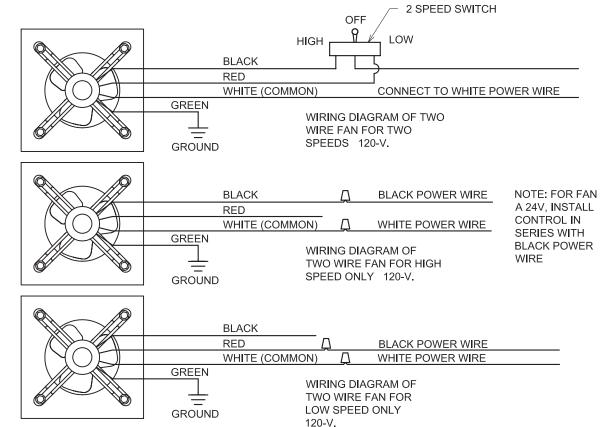

Note:- For A-30 & A-36 wiring diagram & rotation change see the motor name plate.



790 Rowntree Dairy Road, Woodbridge ON, Canada L4L 5V3 Tel: 905-851-6701 • Fax: 905-851-8376 • info@reversomatic.com